

LEVEL 2 NON-PROPRIETARY SECURITY POLICY FOR

Luna® PCI 7000 for Luna® SA, Luna® PCI 7000 for Luna® SP, and Luna® PCI 7000 for Luna® XML Cryptographic Modules

(includes configurations, Key Export with SIM [KES], Cloning [CL], and SIM)

DOCUMENT NUMBER: CR-3050
AUTHOR: Yousof Pakzad
DEPARTMENT: Engineering
LOCATION OF ISSUE: Ottawa
DATE ORIGINATED: May 12, 2009

REVISION LEVEL: 8

REVISION DATE: November 4, 2010

SUPERSESSION DATA: CR-3050, Revision Level 7

SECURITY LEVEL: Non-proprietary

© Copyright 2009-2010 SafeNet, Inc.

ALL RIGHTS RESERVED

This document may be freely reproduced and distributed whole and intact including this copyright notice.

SafeNet, Inc. reserves the right to make changes in the product or its specifications mentioned in this publication without notice. Accordingly, the reader is cautioned to verify that information in this publication is current before placing orders. The information furnished by SafeNet, Inc. in this document is believed to be accurate and reliable. However, no responsibility is assumed by SafeNet, Inc. for its use, or for any infringements of patents or other rights of third parties resulting from its use.

PREFACE

This document deals only with operations and capabilities of the Luna® PCI Cryptographic Module in the technical terms of a FIPS 140-2 cryptographic module security policy. More information is available on the Luna PCI and other SafeNet products from the following sources:

- The SafeNet internet site contains information on the full line of security products at http://www.safenet-inc.com/.
- For answers to technical or sales related questions please refer to the contacts listed below or on the SafeNet internet site at http://www.safenet-inc.com/company/contact.asp.

SafeNet Contact Information:	
SafeNet, Inc. (Corporate Headquarters)	4690 Millennium Drive Belcamp, MD 21017
	Telephone: 410-931-7500 TTY Users: 800-735-2258 Fax: 410-931-7524
SafeNet Canada, Inc.	20 Colonnade Road Suite 200 Ottawa, Ontario K2E 7M6
	Telephone: +1 613 723 5077 Fax: +1 613 723 5078
SafeNet Sales:	
U.S.	(800) 533-3958
International	+1 (410) 931-7500
SafeNet Technical Support:	-
U.S.	(800) 545-6608
International	+1 (410) 931-7520
SafeNet Customer Service:	
U.S.	(866) 251-4269
EMEA	+44 (0) 1276 60 80 00
APAC	852 3157 7111



TABLE OF CONTENTS

Section	n	Title	Page
1.	INTR	ODUCTION	. 1
1.1.	Pu	rpose	. 1
1.2.	Sc	ope	. 1
2.	SEC	URITY POLICY MODEL INTRODUCTION	. 1
2.1.	Fu	nctional Overview	. 1
2.2.	As	sets to be Protected	. 3
2.3.	Op	erating Environment	. 4
3.	SEC	URITY POLICY MODEL DESCRIPTION	. 4
3.1.	Op	erational Policy	. 4
3.	1.1.	Module Capabilities	. 5
3.	1.2.	Partition Capabilities	. 6
3.2.	FIF	PS-Approved Mode	12
3.3.	De	scription of Operator, Subject and Object	12
3.	3.1.	Operator	12
3.	3.2.	Roles	12
3.	3.3.	Account Data	13
3.	3.4.	Subject	13
3.	3.5.	Operator – Subject Binding	13
3.	3.6.	Object	14
3.	3.7.	Object Operations	14
3.4.	lde	entification and Authentication	14
3.	4.1.	Authentication Data Generation and Entry	14
3.	4.2.	Limits on Login Failures	15
3.5.	Ac	cess Control	15
3.	5.1.	Object Re-use	17
3.	5.2.	Privileged Functions	17
3.6.	Cr	yptographic Material Management	17
3.7.	Cr	yptographic Operations	18
3.8.	Se	lf-tests	19
3.9.	Fir	mware Security	19
3.10). I	Physical Security	19
3.11	. 1	EMI / EMC	20
3.12	2. I	Fault Tolerance2	20
3.13	3. I	Mitigation of Other Attacks	20



LIST OF TABLES

Table	Title	Page
Table 3-2 Part Table 3-3 Obje Table 3-4. Alge	lule Capabilities and Policies	9 6 8
	LIST OF FIGURES	
Figure	Title	Page
Figure 2-2. Lui Figure 2-3. Lui	na PCI Cryptographic Module	2
	LIST OF APPENDICES	
Appendix	Title	Page
APPENDIX A. APPENDIX B. APPENDIX C	CRYPTOGRAPHIC ALGORITHMS SUPPORTSECURITY POLICY CHECKLIST TABLES	1



- THIS PAGE LEFT BLANK INTENTIONALLY -



1. INTRODUCTION

1.1. Purpose

This document describes the security policies enforced by SafeNet Inc.'s Luna® PCI 7000 for Luna® SA, Luna® PCI 7000 for Luna® SP, and Luna® PCI 7000 for Luna® XML Cryptographic Modules¹.

This document applies to Hardware Version VBD-03-0100 with Firmware Version 4.8.1.

1.2. Scope

The security policies described in this document apply to the Password Authentication (Level 2) configuration of the Luna PCI cryptographic module only and do not include any security policy that may be enforced by the host appliance or server.

2. SECURITY POLICY MODEL INTRODUCTION

2.1. Functional Overview

The Luna PCI cryptographic module is a multi-chip embedded hardware cryptographic module in the form of a PCI card that typically resides within a custom computing or secure communications appliance. The cryptographic module is contained in its own secure enclosure that provides physical resistance to tampering. The cryptographic boundary of the module is defined to encompass all components inside the secure enclosure on the PCI card. Figure 2-1 depicts the Luna PCI cryptographic module and Figure 2-2 depicts the Luna SA Appliance, which includes the PCI card installed inside.

The cryptographic module may be explicitly configured to operate in FIPS Level 2 mode, or in a non-FIPS mode of operation. Configuration in FIPS mode enforces the use of FIPS-approved algorithms only.

A cryptographic module is accessed directly (i.e., electrically) via the PCI communications interface. A module provides secure key generation and storage for symmetric keys and asymmetric key pairs along with symmetric and asymmetric cryptographic services. Access to key material and cryptographic services for users and user application software is provided indirectly through the host appliance. A module provides the ability to manage multiple user definitions and concurrent authentication states. The software on the host that provides the connections to the module presents a logical view of "virtual tokens" or "partitions" to user applications. Each partition must be separately authenticated in order to make it available for use.

This Security Policy is specifically written for the Luna PCI cryptographic module in a **Password Authentication (FIPS Level 2)** configuration.



Also known as the K5

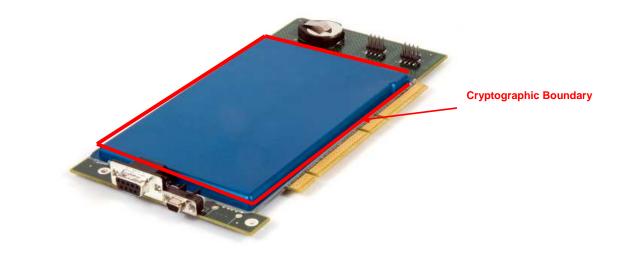


Figure 2-1. Luna PCI Cryptographic Module



Figure 2-2. Luna SA with Luna PCI Module Installed





Figure 2-3. Luna SP with Luna PCI Module Installed



Figure 2-4. Luna XML with Luna PCI Module Installed

2.2. Assets to be Protected

The module is designed to protect the following assets:

- 1. User-generated private keys,
- 2. User-generated secret keys,
- 3. Cryptographic services, and
- 4. Module security critical parameters.



2.3. Operating Environment

The module is assumed to operate as a key management and cryptographic processing card within a security appliance that may operate in a TCP/IP network environment or directly connected as a PCI card within a host computer. The host may be used in an internal network environment when key management security is a primary requirement. It may also be deployed in environments where it is used primarily as a cryptographic accelerator, in which case it will often be connected to external networks. It is assumed that the host computer or appliance runs a suitably secured operating system, with an interface for use by locally connected or remote administrators and an interface to provide access to the module's cryptographic functions by application services running on the host computer. It is also assumed that only known versions of the application services are permitted to run on the internal host computer of the appliance.

It is assumed that trained and trustworthy administrators are responsible for the initial configuration and ongoing maintenance of the host computer and the cryptographic module.

It is assumed that physical access to the cryptographic module will be controlled, and that connections to the host computer will be controlled either by accessing the host via a direct local connection or by accessing it via remote connections controlled by secure services.

3. SECURITY POLICY MODEL DESCRIPTION

This section provides a narrative description of the security policy enforced by the module, in its most general form. It is intended both to state the security policy enforced by the module and to give the reader an overall understanding of the security behaviour of the module. The detailed functional specification for the module is provided elsewhere.

The security behaviour of the cryptographic module is governed by the following security policies:

- Operational Policy
- Identification and Authentication Policy
- Access Control Policy
- Cryptographic Material Management Policy
- Firmware Security Policy
- Physical Security Policy

These policies complement each other to provide assurance that cryptographic material is securely managed throughout its life cycle and that access to other data and functions provided by the products is properly controlled. Configurable parameters that determine many of the variable aspects of the module's behaviour are specified by the higher level Operational Policy implemented at two levels: the cryptographic module as a whole and the individual partition. This is described in section 3.1.

The Identification and Authentication policy is crucial for security enforcement and it is described in section 3.4. The access control policy is the main security functional policy enforced by the module and is described in section 3.5, which also describes the supporting object re-use policy. Cryptographic Material Management is described in section 3.6. Firmware security, physical security and fault tolerance are described in sections 3.8 through 3.12.

3.1. Operational Policy

The module employs the concept of the Operational Policy to control the overall behaviour of the module and each of the partitions within. At each level, either the module or the partition is assigned a fixed set of "capabilities" that govern the allowed behaviour of the module or individual partition. The Security Officer (SO) establishes the Operational Policy by enabling/disabling or refining the corresponding policy elements to equate to or to be more restrictive than the pre-assigned capabilities.



The set of configurable policy elements is a proper subset of the corresponding capability set. That is, not all elements of the capability set can be refined. Which of the capability set elements have corresponding policy set elements is pre-determined based on the "personality" of the partition or manufacturing restrictions placed on the module. For example, the module capability setting for "domestic algorithms and key sizes available" does not have a corresponding configurable policy element.

There are also several fixed settings that do not have corresponding capability set elements. These are elements of the cryptographic module's behaviour that are truly fixed and, therefore, are not subject to configuration by the SO. The specific settings are the following:

- Allow/disallow non-sensitive secret keys fixed as disallow.
- Allow/disallow non-sensitive private keys fixed as disallow.
- Allow/disallow non-private secret keys fixed as disallow.
- Allow/disallow non-private private keys fixed as disallow.
- Allow/disallow secret key creation through the create objects interface fixed as disallow.
- Allow/disallow private key creation through the create objects interface fixed as disallow.

Further, policy set elements can only refine capability set elements to more restrictive values. Even if an element of the policy set exists to refine an element of the capability set, it may not be possible to assign the policy set element to a value other than that held by the capability set element. Specifically, if a capability set element is set to allow, the corresponding policy element may be set to either enable or disable. However, if a capability set element is set to disallow, the corresponding policy element can only be set to disable. Thus, an SO cannot use policy refinement to lift a restriction set in a capability definition.

3.1.1. Module Capabilities²

The following is the set of capabilities supported at the module level:

- Module is FIPS validated.
- Allow/disallow non-FIPS algorithms available.
- Allow/disallow password authentication. (Allowed in Level 2 configuration.)
- Allow/disallow trusted path authentication. (Disallowed in Level 2 configuration.)
- Allow/disallow remote PED usage (Disallowed in Level 2 configuration.)
- Allow/disallow M of N. (Disallowed in Level 2 configuration.)
- Allow/disallow cloning.
- Allow/disallow masking.
- Allow/disallow off-board storage.
- Allow/disallow M of N auto-activation. (Disallowed in Level 2 configuration.)
- Allow/disallow ECC mechanisms.
- Number of failed SO logins allowed before the Hardware Security Module (HSM) is zeroized (set to 3).
- Allow/disallow Korean Digital Signature algorithms.
- Allow/disallow Remote Authentication. (Not applicable.)³
- Allow/disallow SO reset of partition PIN.

³ The capability of "Allow/Disallow Remote Authentication" is dependent on trusted path authentication, which is disabled in the Level 2 configuration (hence the designation of "Not Applicable").



- Allow/disallow network replication.
- Allow/disallow forcing PIN change.

3.1.2. Partition Capabilities

The following is the set of capabilities supported at the partition level. All capability elements described as "allow/disallow some functionality" are Boolean values where false (or zero) equates to disallow the functionality and true (or one) equates to allow the functionality. The remainder of the elements are integer values of the indicated number of bits.

- Allow/disallow partition reset.
- Allow/disallow activation.
- Allow/disallow automatic activation.
- Allow/disallow High Availability (HA).
- Allow/disallow multipurpose keys.
- Allow/disallow changing of certain key attributes once a key has been created.
- Allow/disallow operation without RSA blinding.
- Allow/disallow signing operations with non-local keys.
- Allow/disallow raw RSA operations. (Only used for RSA-based key transport purposes.)
- Allow/disallow private key wrapping.
- Allow/disallow private key unwrapping.
- Allow/disallow secret key wrapping.
- Allow/disallow secret key unwrapping.
- Allow/disallow Trusted Path operation without a challenge. (Not applicable.)⁴
- Allow/disallow user key management capability. (Not applicable.)⁵
- Allow/disallow incrementing of failed login attempt counter on failed challenge response validation.
- Allow/disallow RSA signing without confirmation.
- Allow/disallow Registration Authority (RA) type wrapping.
- Minimum/maximum password length (applies only to Level 2 modules and minimum must be >= 7).
- Number of failed Partition User logins allowed before partition is locked out/cleared. (The maximum value, set as the default, is 10.)

The following capabilities are only configurable if cloning is allowed and enabled at the module level:

- Allow/disallow private key cloning.
- Allow/disallow secret key cloning.

The following capabilities are only configurable if masking is allowed and enabled at the module level:

- Allow/disallow private key masking.
- Allow/disallow secret key masking.

⁵ The capability of "user key management capability" is not applicable because it is dependent on a Security Level 3 configuration.



_

⁴ The capability of "trusted path operation without a challenge" is not applicable because it is dependent on a Security Level 3 configuration.

In addition, the masking function can only be used according to the following restrictions:

• If cloning is not allowed or not enabled, masking/unmasking can only be used by the original module within its host appliance.

• If cloning is allowed and enabled, masking/unmasking can be used across multiple modules within the same domain.

The following tables summarize the module and partition capabilities, showing typical capability settings for Luna PCI modules configured for product sales as Luna SA, Luna SP, and Luna XML: Cloning (CL), Key Export with SIM (KES), and SIM. An **X** indicates the default capability setting for each configuration of the module. Greyed-out rows indicate that the corresponding capability setting is not used as a default for any module configuration.

Table 3-1 Module Capabilities and Policies

Description	Capability	KES	CL	SIM	Policy	Comments	
					Enable	SO can configure the policy to enable or disable the	
Non-FIPS algorithms available	Allow	Х	Х	Х	Disable	availability of non-FIPS algorithms at the time the HSM is initialized.	
available	Disallow				Disable	The HSM must operate using FIPS-approved algorithms only. Must be disabled in FIPS mode	
	Allow	х	х	х	Enable	SO can configure the policy to enable or disable the use	
Password	Allow	^	^	^	Disable	of passwords without trusted path for authentication.	
authentication	Disallow				Disable	The HSM must operate using the trusted path and module-generated secrets for authentication.	
					Enable	SO can configure the policy to enable or disable the use	
Trusted path authentication	Allow				Disable	of the trusted path and module-generated secrets for authentication.	
addictionation	Disallow	х	Х	Х	Disable	The HSM must operate using passwords without trusted path for authentication. ⁶	
	Allow				Enable	The HSM can use remote PED for Trusted Path authentication. Allowed in trusted path authentication	
Remote PED Usage	Allow				Disable	only.	
	Disallow	х	х	х	Disable	The HSM cannot use remote PED for Trusted Path authentication	
					Enable	SO can configure the policy to enable or disable the use	
M of N	Allow	llow			Disable	of M of N secret sharing to activate the module. Requires that the policy for "trusted path" authentication be enabled.	
	Disallow	х	х	Х	Disable	The HSM must operate without M of N secret sharing for activation.	
					Enable	SO can configure the policy to enable or disable the	
Cloning	Allow	Х	Х	Х	Disable	availability of the cloning function for the HSM as a whole.	
	Disallow				Disable	The HSM must operate without cloning.	
	Allann			v	Enable	SO can configure the policy to enable or disable the	
Masking	Allow	Х		Х	Disable	availability of the masking function for the HSM as a whole.	
	Disallow		Х		Disable	The HSM must operate without masking.	
	Allann	v			Enable	Off-board storage is used for backup purposes in the	
Off-board Storage	Allow	Х			Disable	Luna PCI stand-alone configuration. The SO can enable or disable the use of off-board storage.	
	Disallow		Х	Х	Disable	Off-board storage is not allowed in the SA configuration.	
M of N auto-activation	Allow				Enable	SO can configure the policy to enable or disable the use	

⁶ One and only one means of authentication ("user password" or "trusted path") must be enabled by the policy. Therefore, one of the authentication capabilities must be allowed and, if one of the capabilities is disallowed or the policy setting disabled, then the policy setting for the other must be enabled.



Description	Capability	KES	CL	SIM	Policy	Comments
					Disable	of the M of N auto-activation feature.
	Disallow	Х	Х	Х	Disable	The HSM must operate without M of N auto-activation.
FCC mask suisma	Allow	х	х	х	Enable	This capability is set prior to shipment to the customer. It
ECC mechanisms available	Allow	^	^	^	Disable	controls the availability of ECC mechanisms.
avanabio	Disallow				Disable	ECC mechanisms are not available.
					Enable	SO can configure the policy to enable a partition to be
Partition reset	Allow		Х	Х	Disable	reset if it is locked as a result of exceeding the maximum number of failed login attempts.
FattitionTeset	Disallow				Disable	A partition cannot be reset and must be re-created as a result of exceeding the maximum number of failed login attempts.
	1	х			Enable	SO can configure the policy to enable the replication of
Network Replication	Allow			Х	Disable	the module's key material over the network to a second module.
	Disallow	Х			Disable	The module cannot be replicated over the network.
					Enable	This capability is set prior to shipment to the customer. If
Force user PIN change	Allow	X	X X	Х	Disable	enabled, it forces the user to change the PIN upon first login.
-	Disallow				Disable	The user is never forced to change PIN on first login.
-	Allow	х	х	х	Enable	This capability is set prior to shipment to the customer. It
Remote authentication	Allow	_ ^	X X X		Disable	allows the use of remote authentication.
	Disallow				Disable	Remote authentication cannot be enabled for the module.

Table 3-2 Partition Capabilities and Policies

Description	Prerequisite	Capability	KES	CL	SIM	Policy	Comments
Trusted Path operation without a challenge	Trusted path authentication enabled	Allow				Enable Disable	SO can configure the policy to enable Trusted Path login using the PED trusted path only, with no challenge-response validation required. Must be disabled if either activation or auto-activation is enabled
		Disallow	N/A	N/A	N/A	Disable	Challenge-response validation required plus PED Trusted Path login to access the partition.
	Trusted path					Enable	SO can configure the policy to enable the normal PKCS
User key management capability ⁷	authentication enabled, Trusted Path operation without a challenge disabled	Allow	х	Х	х	Disable	#11 user role to perform key management functions. If enabled, the Crypto Officer key management functions are available. If disabled, only the Crypto User role functions are accessible.
	challenge disabled	Disallow				Disable	Only the Crypto User role functions are accessible.
						Enable	SO can configure the policy to count failures of the
Count failed challenge- response validations	Trusted path authentication enabled	Allow				Disable	challenge-response validation against the maximum login failures or not. Must be enabled if either activation or auto-activation is enabled
·		Disallow	N/A	N/A	N/A	Disable	Failures of the challenge-response validation are not counted against the maximum login failures.
						Enable	SO can configure the policy to enable the authentication
Activation	Trusted path authentication enabled	Allow				Disable	data provided via the PED trusted path to be cached in the module, allowing all subsequent access to the partition, after the first login, to be done on the basis of challenge-response validation alone.
			х	Х	Х	Disable	PED trusted path authentication is required for every access to the partition.
						Enable	SO can configure the policy to enable the activation data to
Auto-activation	Trusted path authentication enabled	Allow				Disable	be stored on the appliance server in encrypted form, allowing the partition to resume its authentication state after a re-start. This is intended primarily to allow partitions to automatically re-start operation when the appliance returns from a power outage.
		Disallow	Х	Х	Х	Disable	Activation data cannot be externally cached.
	Natural, madication	Allow	х	х	х	Enable	SO can configure the policy to enable the use of the High
High Availability	Network replication enabled	Allow	^	^_	^	Disable	Availability feature.
		Disallow				Disable	High Availability cannot be enabled.

⁷ This capability/policy is intended to offer customers a greater level of control over key management functions. By disabling the policy, the Security Officer places the partition into a state in which the key material is locked down and can only be used by connected applications, i.e., only Crypto User access is possible.



Description	Prerequisite	Capability	KES	CL	SIM	Policy	Comments
						Enable	SO can configure the policy to enable the use of keys for
Multipurpose keys	N/A	Allow	Х	Х	Х	Disable	more than one purpose, e.g., an RSA private key could be used for digital signature and for decryption.
		Disallow				Disable	Keys can only be used for a single purpose.
		Allow	х	х	х	Enable	SO can configure the policy to enable changing key
Change attributes	N/A	Allow	^	^	^	Disable	attributes.
		Disallow				Disable	Key attributes cannot be changed.
						Enable	SO can configure the use of blinding mode for RSA
Operate without RSA blinding	N/A	Allow	х	Х	х	Disable	operations. Blinding mode is used to defeat timing analysis attacks on RSA digital signature operations, but it also imposes a significant performance penalty on the signature operations.
		Disallow				Disable	Blinding mode is not used for RSA operations.
			.,	.,		Enable	SO can configure the ability to sign with externally-
Signing with non-local keys	ning with non-local keys N/A	Allow	Х	Х	X	Disable	generated private keys that have been imported into the partition.
		Disallow				Disable	Externally-generated private keys cannot be used for signature operations.
		Allow	Y	х х	х	Enable	SO can configure the ability to use raw (no padding) format
Raw RSA operations	N/A	Allow	^			Disable	for RSA operations.
	·	Disallow				Disable	Raw RSA cannot be used.
		Allow	х			Enable	SO can configure the ability to wrap private keys for export.
Private key wrapping	N/A	Allow	^			Disable	Go can configure the ability to wrap private keys for export.
, 11 6		Disallow		х	x	Disable	Private keys cannot be wrapped and exported from the partition.
		Allow	х	х	х	Enable	SO can configure the ability to unwrap private keys and
Private key unwrapping	N/A	Allow	^	^	^	Disable	import them into the partition.
3		Disallow				Disable	Private keys cannot be unwrapped and imported into the partition.
		Allow	х	х	х	Enable	SO can configure the ability to wrap secret keys and export
Secret key wrapping	N/A	Allow	^	^	^	Disable	them from the partition.
Constitution mapping	,	Disallow				Disable	Secret keys cannot be wrapped and exported from the partition.
		Allow	х	v	х	Enable	SO can configure the ability to unwrap secret keys and
Secret key unwrapping	N/A	Allow	X	Х	^	Disable	import them into the partition.
Costocito, animapping		Disallow				Disable	Secret keys cannot be unwrapped and imported into the partition.



Description	Prerequisite	Capability	KES	CL	SIM	Policy	Comments
		Allow		Х		Enable	SO can configure the ability to clone private keys from one
Private key cloning	Cloning enabled	Allow		^		Disable	module and partition to another.
		Disallow	Х		Х	Disable	Private keys cannot be cloned.
		Allow		х		Enable	SO can configure the ability to clone secret keys from one
Secret key cloning	Cloning enabled	Allow		^		Disable	module and partition to another.
		Disallow	Х		Х	Disable	Secret keys cannot be cloned.
		Allow			х	Enable	SO can configure the ability to mask private keys for
Private key masking	Masking enabled	Allow			X	Disable	storage outside the partition.
Tivale key macking	Tivate key masking chabled		х	Х		Disable	Private keys cannot be masked for storage outside the partition.
		Allow	x		х	Enable	SO can configure the ability to mask secret keys for storage
Secret key masking	Masking enabled	Allow	^			Disable	outside the partition.
Cooler noy macking	Washing enabled			Х		Disable	Secret keys cannot be masked for storage outside the partition.
		Allow	х	х	х	Enable	This setting allows wrapping of individual private key CRT
RA type wrapping	Private key wrapping enabled	ey wrapping Allow A		^	Disable	components rather than as one PKCS #8 formatted object.	
	0.100.100	Disallow				Disable	
Minimum/maximum password length	User password authentication enabled	7-255 characters				Configurable	The SO can configure the minimum password length for Level 2 modules, but minimum length must always be >= 7.
Number of failed Partition User logins allowed	N/A	Minimum:1, Maximum:10				Configurable	The SO can configure; default maximum value is 10.



3.2. FIPS-Approved Mode

The SO controls operation of a module in FIPS-approved mode, as defined by FIPS PUB 140-2, by enabling or disabling the appropriate Module Policy settings (assuming each is allowed at the Module Capability level). To operate in FIPS-approved mode, the following policy settings are required:

"Non-FIPS Algorithms Available" must be disabled.

Additionally, for operation at FIPS Level 2:

- "User password authentication" must be enabled (implies that trusted path authentication is disallowed or disabled).
- Raw RSA operations must only be used for key transport in FIPS mode

The policy setting "User password authentication" may also be configured in the case where "Non-FIPS Algorithms Available" has been enabled.

If the SO selects policy options (i.e., enables "Non-FIPS Algorithms Available") that would place a module in a mode of operation that is not approved, a warning is displayed and the SO is prompted to confirm the selection. The SO can determine FIPS mode of operation by matching the displayed capability and policy settings to those described in Sections 3.1 and 3.2.

3.3. Description of Operator, Subject and Object

3.3.1. Operator

An operator is defined as an entity that acts to perform an operation on a module. An operator may be directly mapped to a responsible individual or organization, or it may be mapped to a composite of a responsible individual or organization plus an agent (application program) acting on behalf of the responsible individual or organization.

In the case of a Certification Authority (CA), for example, the organization may empower one individual or a small group of individuals acting together to operate a cryptographic module as part of the company's service. The operator might be that individual or group, particularly if they are interacting with a module locally.

3.3.2. Roles

In a Level 2 configuration (Password Authentication), the Luna cryptographic module supports two authenticated roles: Crypto Officer and Security Officer. The cryptographic module also supports one unauthenticated operator role, the Public User, primarily to permit access to status information and diagnostics before authentication.

The SO is a privileged role, which exists only at the module level, whose primary purpose is to initially configure a module for operation and to perform security administration tasks such as partition creation. The Crypto Officer is the key management and user role for the partition.

For an operator to assume any role other than Public User, the operator must be identified and authenticated. The following conditions must hold in order to assume one of the authenticated roles:

- No operator can assume the Crypto Officer or Security Officer role before identification and authentication;
- No identity can assume the Crypto Officer plus the Security Officer role.



3.3.3. Account Data

The module maintains the following User (per Partition⁸) and SO account data:

- Partition ID or SO ID number.
- Partition User encrypted or SO encrypted authentication data (checkword).⁹
- Partition User locked out flag.

An authenticated User is referred to as a Partition User. The ability to manipulate the account data is restricted to the SO and the Partition User. The specific restrictions are as described below:

- 1. Only the Security Officer role can create (initialize) and delete the following security attributes:
 - Partition ID.
 - Checkword.
- 2. If Partition reset is allowed and enabled, the SO role only can modify the following security attribute:
 - · Locked out flag for Partition User.
- 3. Only the Partition User can modify the following security attribute:
 - Checkword for Partition User.
- 4. Only the Security Officer role can change the default value, query, modify and delete the following security attribute:
 - Checkword for Security Officer.

3.3.4. Subject

For purposes of this security policy, the subject is defined to be a module session. The session provides a logical means of mapping between applications connecting to a module and the processing of commands within a module. Each session is tracked by the Session ID, the Partition ID and the Access ID, which is a unique ID associated with the application's connection. It is possible to have multiple open sessions with a module associated with the same Access ID/Partition ID combination. It is also possible for a module to have sessions opened for more than one Partition ID or have multiple Access IDs with sessions opened on a module. Applications running on remote host systems that require data and cryptographic services from a module must first connect via the communications service within the appliance, which will establish the unique Access ID for the connection and then allow the application to open a session with one of the partitions within a module. A local application (e.g., command line administration interface) will open a session directly with the appropriate partition within a module without invoking the communications service.

3.3.5. Operator – Subject Binding

An operator must access a partition through a session. A session is opened with a partition in an unauthenticated state and the operator must be authenticated before any access to cryptographic functions and Private objects within the partition can be granted. Once the operator is successfully identified and authenticated, the session state becomes authenticated and is bound to the Partition User represented by the Partition ID, in the Crypto Officer role. Any other sessions opened with the same Access ID/Partition ID combination will share the same authentication state and be bound to the same Partition User.

The password-derived key is used for authentication and access control purposes. In a Level 2 configuration, data encrypted by it is considered to be plaintext data for FIPS purposes.



⁸ A Partition effectively represents an identity within the module.

3.3.6. Object

An object is defined to be any formatted data held in volatile or non-volatile memory on behalf of an operator. For the purposes of this security policy, the objects of primary concern are private (asymmetric) keys and secret (symmetric) keys.

3.3.7. Object Operations

Object operations may only be performed by a Partition User. New objects can be made in several ways. The following list identifies operations that produce new objects:

- Create.
- Copy,
- Generate,
- Unwrapping,
- Derive.

Existing objects can be modified and deleted. The values of a subset of attributes can be changed through a modification operation. Objects can be deleted through a destruction operation. Constant operations do not cause creation, modification or deletion of an object. These constant operations include:

- Query an object's size;
- Query the size of an attribute;
- Query the value of an attribute;
- Use the value of an attribute in a cryptographic operation;
- · Search for objects based on matching attributes;
- Cloning an object;
- Wrapping an object (key export); and
- Masking and unmasking an object (SIM).

Secret keys and private keys are always maintained as Sensitive objects and, therefore, they are permanently stored with the key value encrypted to protect its confidentiality. Key objects held in volatile memory do not have their key values encrypted, but they are subject to active zeroization in the event of a module reset. Operators are not given direct access to key values for any purpose.

3.4. Identification and Authentication

3.4.1. Authentication Data Generation and Entry

The module requires that Partition Users and the SO be authenticated by proving knowledge of a secret shared by the operator and a module. The FIPS mode is determined when the HSM is initialized: a module that is to support Level 2 mode must be initialized using a password to define the SO authentication data.

For a module operating in FIPS Level 2 mode, the SO must enable the "User password authentication" (implies that the trusted path authentication is disallowed or disabled). The SO defines a user password when a partition is created. The minimum length of the password must always be equal to or greater than 7 characters, and up to 255 characters.



3.4.2. Limits on Login Failures

The module also implements a maximum login attempts policy. The policy differs for an SO authentication data search and a Partition User authentication data search.

In the case of an SO authentication data search:

• If three (3) consecutive SO logon attempts fail, a module is zeroized.

In the case of a Partition User authentication data search, one of two responses will occur, depending on the partition policy:

- If "Partition reset" is Allowed and Enabled, then if "n" ("n" is set by the SO at the time the HSM is initialized) consecutive operator logon attempts fail, the module flags the event in the Partition User's account data, lock the Partition User and clear the volatile memory space. The SO must unlock the partition in order for the Partition User to resume operation.
- 2. If "Partition reset" is not Allowed or not Enabled, then if "n" consecutive Partition User logon attempts via the physical trusted path fail, the module will erase the partition. The SO must delete and re-create the partition. Any objects stored in the partition, including private and secret keys, are permanently erased.

3.5. Access Control

The Access Control Policy is the main security function policy enforced by a module. It governs the rights of a subject to perform privileged functions and to access objects stored in a module. It covers the object operations detailed in section 3.3.7.

A subject's access to objects stored in a module is mediated on the basis of the following subject and object attributes:

- Subject attributes:
 - Session ID
 - Access ID and Partition ID associated with session
 - Session authentication state (binding to authenticated Partition identity and role)
- Object attributes:
 - Owner. A Private object is owned by the Partition User associated with the subject that produces it. Ownership is enforced via internal key management.
 - Private. If True, the object is Private. If False, the object is Public.
 - o **Sensitive.** If True, object is Sensitive. If False, object is Non-Sensitive.
 - Extractable¹⁰. If True, object may be extracted. If False, object may not be extracted.
 - Modifiable. If True, object may be modified. If False, object may not be modified.

¹⁰Extract means to remove the key from the control of the module. This is typically done using the Wrap operation, but the Mask operation is also considered to perform an extraction when cloning is enabled for the container.



Objects are labelled with a number corresponding to their partition and are only accessible by a subject associated with the owning Partition ID. Only generic data and certificate objects can be non-sensitive. Private key and secret key objects are always created as Sensitive, Private objects. Sensitive objects are encrypted using the partition's secret key to prevent their values from ever being exposed to external entities. Private objects can only be used for cryptographic operations by a logged in Partition User. Key objects that are marked as extractable may be exported from a module using the Wrap operation if allowed and enabled in the partition's policy set. Table 3-3 summarizes the object attributes used in Access Control Policy enforcement.

Table 3-3 Object Attributes Used in Access Control Policy Enforcement

Attribute	Values	Impact
PRIVATE	TRUE – Object is private to (owned by) the operator identified as the Access Owner when the object is created.	Object is only accessible to subjects (sessions) bound to the operator identity that owns the object.
PRIVATE	FALSE – Object is not private to one operator identity.	Object is accessible to all subjects associated with the partition in which the object is stored.
SENSITIVE	TRUE – Attribute values representing plaintext key material are not permitted to exist (value encrypted).	Key material is stored in encrypted form.
SENSITIVE	FALSE – Attribute values representing plaintext data are permitted to exist.	Plaintext data is stored with the object and is accessible to all subjects otherwise permitted access to the object.
MODIFIABLE	TRUE – The object's attribute values may be modified.	The object is "writeable" and its attribute values can be changed during a copy or set attribute operation.
	FALSE – The object's values may not be modified.	The object can only be read and only duplicate copies can be made.
EXTRACTABLE	TRUE – Key material stored with the object may be extracted from the Luna cryptographic module using the Wrap operation.	The ability to extract a key permits sharing with other cryptomodules and archiving of key material.
	FALSE – Key material stored with the object may not be extracted from the Luna cryptographic module.	Keys must never leave a module's control.

The module does not allow any granularity of access other than owner or non-owner (i.e., a Private object is only accessible by one Partition User. It cannot be accessible by two Partition Users and restricted to other Partition Users). Ownership of a Private object gives the owner access to the object through the allowed operations but does not allow the owner to assign a subset of rights to other operators. Allowed operations are those permitted by the HSM and Partition Capability and Policy settings.

The policy is summarized by the following statements:

- A subject may perform an allowed operation on an object if the object is in the partition with which the subject is associated and one of the following two conditions holds:
 - 1. The object is a "Public" object, i.e., the PRIVATE attribute is FALSE, or
 - 2. The subject is bound to the Partition User that owns the object.
- Allowed operations are those permitted by the object attribute definitions within the constraints imposed by the HSM and Partition Capability and Policy settings.



3.5.1. Object Re-use

The access control policy is supported by an object re-use policy. The object re-use policy requires that the resources allocated to an object be cleared of their information content before they are re-allocated to a different object.

3.5.2. Privileged Functions

The module shall restrict the performance of the following functions to the SO role only:

- Module initialization
- Partition creation and deletion
- Configuring the module and partition policies
- Module zeroization
- Firmware update

3.6. Cryptographic Material Management

Cryptographic material (key) management functions protect the confidentiality of key material throughout its life-cycle. The FIPS PUB 140-2 approved key management functions provided by the module are the following:

- (1) Pseudo random number generation in accordance with ANSI X9.31, Appendix A2.4.
- (2) Cryptographic key generation in accordance with the following indicated standards:
 - a. RSA 1024-4096 bits key pairs in accordance with FIPS PUB 186-2.
 - b. TDES 112, 168 bits (FIPS PUB 46-3, ANSI X9.52).
 - c. AES 128, 192, 256 bits (FIPS PUB 197).
 - d. DSA 1024 bits key pairs in accordance with FIPS PUB 186-2.
 - e. ECDSA in accordance with ANSI X9.62.
- (3) Secure key storage and key access following the PKCS #11 standard.
- (4) Destruction of cryptographic keys is performed in one of three ways as described below in accordance with the PKCS #11 and FIPS PUB 140-2 standards:
 - a. An object on a Luna cryptographic module that is destroyed using the PKCS #11 function C_DestroyObject is marked invalid and remains encrypted with the Partition User's key or a Luna cryptographic module's general secret key until such time as its memory locations (flash or RAM) are re-allocated for additional data on the a Luna cryptographic module, at which time they are purged and zeroized before re-allocation.
 - b. Objects on a Luna cryptographic module that are destroyed as a result of authentication failure are zeroized (all flash blocks in the Partition User's memory turned to 1's). If it is an SO authentication failure, all flash blocks used for key and data storage on a Luna cryptographic module are zeroized.
 - c. Objects on a Luna cryptographic module that are destroyed through C_InitToken (the SO-accessible command to initialize a Luna cryptographic module available through the API) are zeroized, along with the rest of the flash memory being used by the SO and Partition Users.



Keys are always stored as secret key or private key objects with the Sensitive attribute set. The key value is, therefore, stored in encrypted form using the owning Partition User's secret key. Access to keys is never provided directly to a calling application. A handle to a particular key is returned that can be used by the application in subsequent calls to perform cryptographic operations.

Private key and secret key objects may be imported into a module using the Unwrap, Unmask (if cloning is enabled at the HSM level) or Derive operation under the control of the Access Control Policy. Any externally-set attributes of keys imported in this way are ignored by a module and their attributes are set by a module to values required by the Access Control Policy.

3.7. Cryptographic Operations

Because of its generic nature, the module's firmware supports a wide range of cryptographic algorithms and mechanisms. The approved cryptographic functions and algorithms that are relevant to the FIPS 140-2 validation are the following:

- (1) Symmetric encryption/decryption (key wrap/unwrap) TDES 168 bits and AES 128, 192 and 256 bits in accordance with PKCS #11.
- (2) Symmetric encryption/decryption: TDES 112, 168 bits (FIPS PUB 46-3, ANSI X9.52).
- (3) Symmetric encryption/decryption: AES 128, 192, 256 bits (FIPS PUB 197).
- (4) Asymmetric key wrap/unwrap: RSA 1024 4096 (PKCS #1 V1.5)
- (5) Signature generation/verification: RSA 1024-4096 bits (PKCS #1 V1.5) with SHA-1, SHA-224, SHA-256, SHA-384, SHA-512 (FIPS PUB 180-2), RSA 1024-4096 bits (PSS) with SHA-1, SHA-224, SHA-256, SHA-384, SHA-512 (FIPS PUB 180-2), RSA 1024-4096 bits (X9.31) with SHA-1, DSA 1024 bits (FIPS PUB 186-2) with SHA-1, ECDSA (ANSI X9.62) with SHA-1.
- (6) Hash generation SHA-1, SHA-224, SHA-256, SHA-384, SHA-512 (FIPS PUB 180-2).
- (7) Keyed hash generation HMAC using SHA-1, SHA-224, SHA-256, SHA-384, SHA-512 (FIPS PUB 198).
- (8) Message authentication TDES MAC (FIPS PUB 113)
- (9) Pseudorandom number generation (ANSI X9.31 A2.4)

Table 3-4. Algorithm Validation Certificates

Algorithm Validation Certificates
AES (Certificate #510 and Certificate #1298)
DSA (Certificate #420)
ECDSA (Certificate #154) – Only NIST Recommended Curves
HMAC: SHA-1, SHA-224, SHA-256, SHA-384, SHA-512 (Certificate #755)
RNG (Certificate #723)
RSA (Certificate #620)
SHA-1, SHA-224, SHA-256, SHA-384, SHA-512 (Certificate #1190)
TDES (Certificate #520 and Certificate #912)
TDES MAC (Vendor Affirmed; (Certificate #520 and Certificate #912)



3.8. Self-tests

The module provides self-tests on power-up and on request to confirm the firmware integrity, and to check the random number generator and each of the implemented cryptographic algorithms.

Table 3-5. Module Self-Tests

Test	When Performed	Indicator
Firmware CRC by boot block prior to firmware start	Power-on	Module halt ¹¹
Firmware SHA-1	Power-on	Module halt
Known-Answer Tests (KATs) for all approved functions (Section 3.7)	Power-on/Request	Module halt / Error - Halt
RNG continuous tests	Continuous	Error - Halt
Pair-wise consistency tests (asymmetric key pairs)	On generation	Error
Firmware load test	On firmware update load	Error – module will continue with existing firmware

3.9. Firmware Security

The Firmware Security Policy assumes that any firmware images loaded in conformance with the policy have been verified by SafeNet to ensure that the firmware will function correctly. The policy applies to initial firmware loading and subsequent firmware updates.

The module shall not allow external software ¹² to be loaded inside its boundary. Only properly formatted firmware may be loaded. The communication of initial or updated firmware to a target module shall be initiated by a SafeNet module dedicated to that function. Firmware shall be digitally signed using the SafeNet Manufacturing signature key and encrypted using a secret key that may be derived by the receiving module for decryption. The unencrypted firmware must not be visible outside a module before, during and after the loading operation.

The firmware shall provide mechanisms to ensure its own integrity and to ensure the integrity of any permanent security-critical data stored within a cryptographic module.

3.10. Physical Security

The Luna cryptographic module is a multi-chip embedded module as defined by FIPS PUB 140-2 section 4.5. The module is enclosed in a strong enclosure that provides tamper-evidence. Any tampering that might compromise a module's security is detectable by visual inspection of the physical integrity of a module. A hard opaque epoxy covers the circuitry of the cryptographic module. Attempts to remove this epoxy will cause sufficient damage to the cryptographic module so that it is rendered inoperable.

The module's enclosure is opaque to resist visual inspection of the device design, physical probing of the device and attempts to access sensitive data on individual components of the device.

The only plaintext Critical Security Parameter (CSP) stored inside the module is the Module Variable Key (TVK), which is used to implement the auto-activation feature. If that feature is used, the TVK is stored in battery-backed RAM, which is zeroized in the event of a tamper detection – either from the external tamper signal or removal of the card from the PCI slot.

¹² External software means any form of executable code that has been generated by anyone other than SafeNet and has not been properly formatted and signed as a legitimate SafeNet firmware image.



¹¹ Details of the failure can be obtained from the dual-port following a module halt.

3.11. EMI / EMC

The module conforms to FCC Part 15 Class B requirements for home use.

3.12. Fault Tolerance

If power is lost to a module for whatever reason, the module shall, at a minimum, maintain itself in a state that it can be placed back into operation when power is restored without compromise of its functionality or permanently stored data.

A module shall maintain its secure state ¹³ in the event of data input/output failures. When data input/output capability is restored, the module will resume operation in the state it was prior to the input/output failure.

3.13. Mitigation of Other Attacks

Timing attacks are mitigated directly by a module through the use of hardware accelerator chips for modular exponentiation operations. The use of hardware acceleration ensures that all RSA signature operations complete in very nearly the same time, therefore making the analysis of timing differences irrelevant. RSA blinding may also be selected as an option to mitigate this type of attack.

The cryptographic module provides a connection to allow it to receive an external tamper event signal. By responding to the signal a module can ensure that no sensitive data remains even if a determined attack defeats the external physical security protection measures. There are two sources for a potential tamper signal. The first is circuitry to detect the removal of a module from a PCI slot. By responding to this external signal, the module ensures that all plaintext sensitive data are cleared if a module is removed from a PCI slot. The second source is used only in the instance of an appliance installation. In that case, the signal would come from tamper detection circuitry that detects opening of the appliance cover. By responding to this external signal, the module ensures that all plaintext sensitive data are cleared if the appliance cover is opened.

¹³ A secure state is one in which either a Luna cryptographic module is operational and its security policy enforcement is functioning correctly, or it is not operational and all sensitive material is stored in a cryptographically protected form on a Luna cryptographic module.



APPENDIX A. CRYPTOGRAPHIC ALGORITHMS SUPPORT

FIPS-approved algorithms are shown in bold lettering.

Random Number Generation

ANSI X9.31 Appendix A, para 2.4 (uses non-approved HRNG as source of seed data)

Encrypt/Decrypt:

- **TDES-ECB**
- **TDES-CBC**
- **AES-ECB**
- **AES-CBC**
- **DES-ECB**
- **DES-CBC**
- RC2-ECB
- RC2-CBC
- RC4
- RC5-ECB
- RC5-CBC
- CAST5-ECB
- CAST5-CBC
- RSA X-509
- SEED
- ARIA

Digest:

- SHA-1
- **SHA-256**
- SHA-224
- SHA-384
- SHA-512
- MD2
- MD5
- HAS-160

Sign/Verify:

- RSA-1024-4096 X9.31
- RSA-1024-4096 PKCS #1 V1.5 with SHA-1, SHA-224, SHA-256, SHA-384, SHA-512
- RSA-1024-4096 PSS with SHA-1, SHA-224, SHA-256, SHA-384, SHA-512
- **DSA 1024**
- **ECDSA**
- **TDES-MAC**
- **HMAC-SHA1**
- HMAC-SHA-224
- HMAC-SHA-256
- HMAC-SHA-384 HMAC-SHA-512
- **AES MAC**
- DES-MAC
- RC2-MAC
- RC5-MAC CAST5-MAC
- SSL3-MD5-MAC
- SSL3-SHA1-MAC
- **KCDSA**

Generate Key:

- **2Key TDES**
- 3Key TDES
- AES 128, 192, 256 bits
- DES
- RC2
- RC4
- RC5
- CAST5
- **SEED**
- **ARIA**
- **GENERIC-SECRET**
- SSL PRE-MASTER

Generate Key Pair:

- RSA-1024 4096 X9.31 and PKCS #1
- DSA-1024
- **ECDSA (NIST curves)**
- DH-1024 provides 80-bits of encryption strength
- **KCDSA**

Wrap Symmetric Key Using Symmetric Algorithm: • TDES-ECB

- **AES-ECB**
- RC2-ECB
- CAST5-ECB

Wrap Symmetric Key Using Asymmetric Algorithm:

- RSA-1024 provides 80-bits of encryption strength
- RSA-2048 provides 112-bits of encryption strength RSA-4096 provides 150-bits of encryption strength

Wrap Asymmetric Key Using Symmetric Algorithm:

- TDES-CBC
- **AES-CBC**

Unwrap Symmetric Key With Symmetric Algorithm:

- TDES-ECB
- **AES ECB**
- RC2-ECB
- CAST5-ECB

Unwrap Symmetric Key With Asymmetric Algorithm:

- RSA-1024
- RSA-2048
- RSA-4096

Unwrap Asymmetric Key With Symmetric Algorithm:

- TDES-CBC
- **AES-CBC**

Derive Symmetric Key

- Diffie-Hellman
- **ECDH**

APPENDIX B. SECURITY POLICY CHECKLIST TABLES

Table B-1 Roles and Required Identification and Authentication

Role	Type of Authentication	Authentication Data
Security Officer	Identity-based	Level 2 – Password
Crypto Officer	Identity-based plus Role-based	Level 2 – Password
Public User	Not required	N/A

Table B-2 Strengths of Authentication Mechanisms

Authentication Mechanism	Strength of Mechanism
Password (Level 2)	Configurable by SO from 7 to 255 characters. With login failure thresholds of 3 for SO and configurable from 1 to 10 (default 10) for users, this ensures the FIPS 140-2 required thresholds can never be reached.

Table B-3 Services Authorized for Roles

Role	Authorized Services
Security Officer	Show Status, Self-test, Initialize Module, Configure Module Policy, Create Partition, Configure Partition Policy, Zerioize, Firmware Update
Crypto Officer	Show Status, Self-test, Key and Key Pair Generation, Symmetric Encrypt/Decrypt, Asymmetric Signature/Verification, Symmetric & Asymmetric Key Wrap/Unwrap, Symmetric & Asymmetric Key Mask/Unmask, Store Data Object, Read Data Object, Partition Backup and Restore
Public User	Show Status, Self-test, Store Public Data Object, Read Public Data Object

Table B-4 Access Rights within Services

Service	Cryptographic Keys and CSPs	Role	Type(s) of Access
Show Status ¹⁴	N/A	All	N/A
Self-test	N/A	All	N/A
Initialize Module	Authentication data	so	Write – SO authentication data
Configure Module Policy	Authentication data	so	Use ¹⁵
Create Partition	Authentication data	SO	Write – User authentication data
Configure Partition Policy	Authentication data	so	Use
Zeroize	Authentication data, symmetric keys, asymmetric key pairs	SO	Write, Erase
Firmware Update	MVK ¹⁶	so	Use, Write (firmware only)
Key and Key Pair Generation	Symmetric keys, asymmetric key pairs	Crypto Officer	Write
Symmetric Key Wrap/ Unwrap	Symmetric with RSA Symmetric with Symmetric ECB mode	Crypto Officer	Use, Write
Asymmetric Key Wrap/ Unwrap	Asymmetric with Symmetric CBC mode	Crypto Officer	Use, Write
Symmetric Key Mask/ Unmask	Symmetric with AES 256	Crypto Officer	Use, Write
Asymmetric Key Mask/ Unmask	Symmetric with AES 256	Crypto Officer	Use, Write
Partition Backup/Restore	Symmetric keys, asymmetric key pairs	Crypto Officer	Transfer ¹⁷
Symmetric Encrypt/Decrypt	Symmetric keys	Crypto Officer	Use
Asymmetric Signature	RSA, DSA private keys	Crypto Officer	Use
Asymmetric Verification	RSA, DSA public keys	Crypto Officer	Use
Store Data Object	Non-cryptographic data	Crypto Officer, Public User ¹⁸	Write
Read Data Object	Non-cryptographic data	Crypto Officer, Public User ¹⁹	Read

Table B-5 Keys and Critical Security Parameters Used in the Module

Key/CSP Name	Description
SIM authorization values	These user-supplied M of N secret values are used to authorize the
	insertion of a masked key blob previously extracted using the SIM II
	feature.
User password	Used in Password Authentication (Level 2) configuration only. The
	user provided password used for authentication in a Level 2
	configuration. Minimum of 7 characters and maximum of 255.

¹⁹ The Public User has access to Public Data Objects only.



¹⁴ Show status is provided by invoking the "hsm showinfo" command from the administrative interface. It will display identifying information about the module such as label, serial number, firmware version, etc., and state whether the module is in FIPS-approved mode.

15 Use means access to key material for use in performing a cryptographic operation. The key material is never visible.

Public key value. See Table B-5 for its description.

Transfer means moving a key using the cloning protocol from one crypto module to another.

The Public User has access to Public Data Objects only.

Table B-5 Keys and Critical Security Parameters Used in the Module

Key/CSP Name	Description
RNG Seed Value (V)	The 64 bit intermediate value of the X9.31 Annex A2.4 TDES-based PRNG algorithm. It is used as one of the initial seed values for the algorithm.
RNG Key Value (*K)	The double-length TDES key used for the X9.31 Annex A2.4 TDES-based PRNG algorithm. It is used as one of the initial seed values for the algorithm. It is stored in flash encrypted with the GSK.
User Storage Key (USK)	24-byte TDES key that is randomly generated for each user on a Luna cryptographic module. This key is used to encrypt all sensitive attributes of all private objects owned by the user.
Security Officer Master Key (SMK)	The storage key for the SO; a 24-byte TDES key that is randomly generated for the SO on the module. This key is used to encrypt all sensitive attributes of all private objects owned by the SO. The USK/SMK is stored encrypted using an AES key, which is derived from the User/SO password. ²⁰
Global Storage Key (GSK)	24-byte TDES key that is the same for all users on a specific Luna cryptographic module. It is stored encrypted with USK and SMK. It is used to encrypt permanent parameters within the non-volatile memory area reserved for use by the module.
Secondary Global Storage Key (SGSK)	24-byte TDES key that is the same for all users on a specific Luna cryptographic module. It is stored encrypted using USK and SMK. It is used to encrypt non-permanent parameters (parameters regenerated for every module initialization) within the non-volatile memory area reserved for use by the module.
Token or Module Wrapping Key (TWK)	A 4096-bit RSA private key used in the cloning protocol. Stored in the Param area; encrypted with the GSK.
Token or Module Wrapping Certificate (TWC)	A 4096-bit RSA public key certificate, corresponding to the TWK, used in exchange of session encryption key as part of the handshake during the cloning protocol. Stored as plaintext in the Param area.
U Key	24-byte TDES key used in conjunction with the auth code for a firmware update to derive a key used to decrypt the firmware update image when it is loaded into the module. Used for backwards compatibility purposes with earlier firmware versions. Stored in the Param area.
Masking Key	AES 256-bit key stored in the Param area. It is generated on the HSM at initialization time. It is used during masking operations
Manufacturer's Integrity Certificate (MIC)	A 4096-bit RSA public key certificate corresponding to the Manufacturer's Integrity Key (MIK) held at SafeNet. Used in verifying Hardware Origin Certificates (HOCs), which are generated in response to a customer function call to provide proof of hardware origin. Stored as plaintext in flash.
Manufacturers Verification Key (MVK)	A 4096-bit Public key counterpart to the Manufacturer's Signature Key (MSK) held at SafeNet. Used to verify the digital signature on a firmware update image. Stored in flash as plaintext.
Device Authentication Key (DAK)	2048-bit RSA private key used for a specific PKI implementation requiring assurance that a key or a specific action originated within the hardware crypto module.

The password-derived key is used for authentication and access control purposes. In a Level 2 configuration, data encrypted by it is considered to be plaintext data for FIPS purposes.



- THIS PAGE LEFT BLANK INTENTIONALLY -



APPENDIX C. LIST OF TERMS, ABBREVIATIONS AND ACRONYMS

Term	Definition
ANSI	American National Standards Institute
CA	Certification Authority
Chrysalis-ITS	Former name of SafeNet Canada, Inc.
CL	Cloning (a capability configuration used to allow the secure transfer of key objects from one module to another for backup and restore and object replication purposes).
СО	Crypto Officer
CRC	Cyclic Redundancy Check
CRT	Chinese Remainder Theorem
CU	Crypto User
DAK	Device Authentication Key
ECC	Elliptic Curve Cryptography
FIPS	Federal Information Processing Standard
GSK	Global Storage Key
HA	High Availability
HOC	Hardware Origin Certificate
HRNG	Hardware Random Number Generator
HSM	Hardware Security Module
KAT	Known Answer Test
KES	Key Export – SIM (a capability configuration used to allow the export of private keys as wrapped objects and to securely transfer the symmetric wrapping key between modules via a SIM [masked object] file).
MAC	Message Authentication Code
MIC	Manufacturer's Integrity Certificate
MIK	Manufacturer's Integrity Key
MSK	Manufacturer's Signature Key
MVK	Manufacturers Verification Key
PCI	Peripheral Component Interconnect
PED	PIN Entry Device
PKCS	Public-Key Cryptography Standards
PRNG	Pseudo-Random Number Generator
RA	Registration Authority
RNG	Random Number Generator
SA	Abbreviation for Luna SA appliance product.
SCU	Secure Capability Update
SGSK	Secondary Global Storage Key
SIM	Secure Information Management (a capability configuration used to allow the use of SIM [masked object] files for secure backup and recovery).
SMK	Security Officer Master Key



Term	Definition
SO	Security Officer
TVK	Token or Module Variable Key
TWC	Token or Module Wrapping Certificate
TWK	Token or Module Wrapping Key
USK	User's Storage Key