



Nexus 7000 10 Slot

FIPS 140-2 Non-Proprietary Security Policy

Level 2 Validation

Document Version: Version 1.0

March 15, 2011

INTRODUCTION

Purpose

This is a non-proprietary Cryptographic Module Security Policy for the Nexus 7000 10 Slot from Cisco Systems, Inc., referred to in this document as the module, appliance, or as previously stated. This security policy describes how modules meet the security requirements of FIPS 140-2 and how to run the modules in a FIPS 140-2 mode of operation.

This policy was prepared as part of the Level 2 FIPS 140-2 validation of the Nexus 7000 10 Slot.

FIPS 140-2 (Federal Information Processing Standards Publication 140-2 — *Security Requirements for Cryptographic Modules*) details the U.S. Government requirements for cryptographic modules. More information about the FIPS 140-2 standard and validation program is available on the NIST website at <http://csrc.nist.gov/groups/STM/cmvp/>

References

This document deals only with operations and capabilities of the module in the technical terms of a FIPS 140-2 cryptographic module security policy. More information is available on the module from the following sources:

- The Cisco Systems, Inc. website (<http://www.cisco.com>) contains information on the full line of products from Cisco Systems, Inc.
- The NIST Cryptographic Module Validation Program website (<http://csrc.nist.gov/groups/STM/cmvp/index.html>) contains contact information for answers to technical or sales-related questions for the module.

Document Organization

The Security Policy document is one document in the FIPS 140-2 Submission Package. In addition to this document, the Submission Package contains:

- Vendor Evidence
- Finite State Machine
- Other supporting documentation as additional references

With the exception of this Non-Proprietary Security Policy, the FIPS 140-2 Validation Documentation is proprietary to Cisco Systems, Inc. and is releasable only under appropriate non-disclosure agreements. For access to these documents, please contact Cisco Systems, Inc.

NEXUS 7000 10 SLOT FROM CISCO SYSTEMS, INC.

General Overview

The Cisco Nexus 7000 10 Slot is a highly scalable in the Data Center end-to-end 10 Gigabit Ethernet switch for mission-critical data center operations. The fabric architecture scales beyond 15 terabits per second (Tbps), with future support for 40-Gbps and 100- Gbps Ethernet. Powered by Cisco NX-OS, a state of the art modular operating system, the platform is designed for exceptional scalability, continuous system operation, serviceability, and transport flexibility. The Cisco Nexus 7000 Series provides comprehensive security features supported by a robust control plane and wire-rate encryption and decryption, allowing security controls that are less complex and more transparent to the protocols and applications in the data center. It supports Cisco TrustSec, a new architecture from Cisco for a converged policy framework to create role-aware networks and pervasive integrity and confidentiality.

FIPS 140-2 Overview

The Nexus 7000 10 Slot as defined within the scope of the FIPS 140-2 requirements is a multi-chip standalone Hardware device. The cryptographic boundary is the exterior Nexus 7000 10 Slot chassis which encompasses all components of the Nexus 7000 10 Slot (see figure 1), therefore ensuring that all components have undergone a thorough FIPS 140-2 testing and also are physically protected such that unauthorized access is detected.

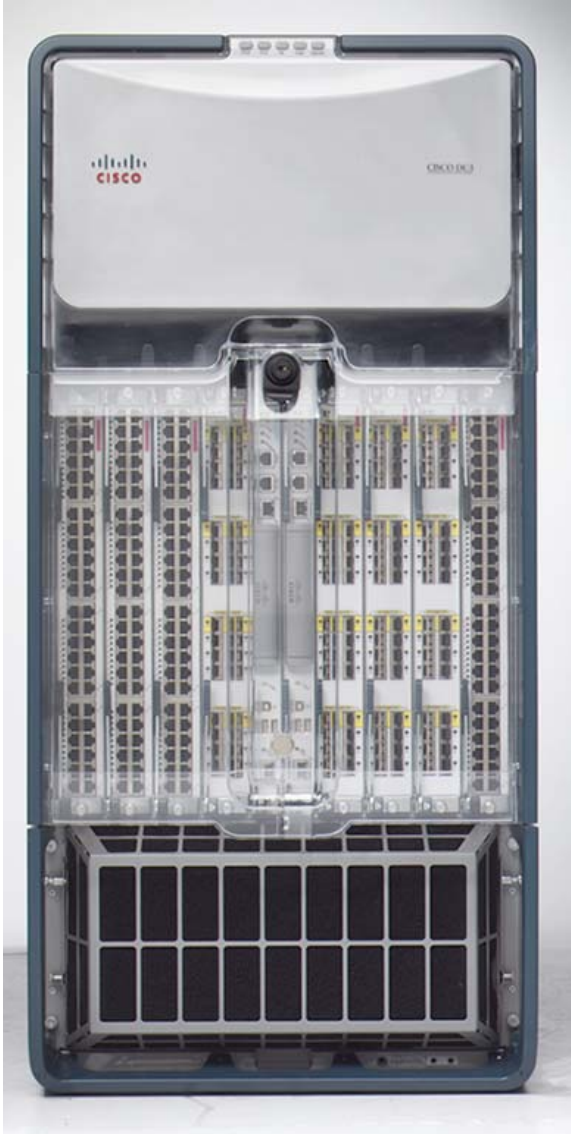


Figure 1 – Front and Back of the Nexus 7000 (10-slot chassis)

Module Validation Level

The Nexus 7000 10 Slot meets FIPS 140-2 Level 2 overall security. In addition to an overall security claim FIPS 140-2 allows the specification of security Level within each FIPS 140-2 category of validation. The following table lists the level of validation for each FIPS 140-2 testing area/category:

No.	Area Title	Level
1	Cryptographic Module Specification	2
2	Cryptographic Module Ports and Interfaces	2
3	Roles, Services, and Authentication	2
4	Finite State Model	2
5	Physical Security	2
6	Operational Environment	N/A
7	Cryptographic Key management	2

8	Electromagnetic Interface/Electromagnetic Compatibility	2
9	Self-Tests	2
10	Design Assurance	2
11	Mitigation of Other Attacks	N/A
Overall	Overall module validation level	2

Table 1 – Validation Level by Section

Module Physical Ports and Interfaces

The Nexus 7000 10 Slot module provides a number of physical ports over which logical interfaces may be accessed. The physical ports and logical interfaces are provided by four major physical components which are all included within the Nexus 7000 10 Slot cryptographic boundary. These components are the Supervisor Card, the Line Card, Power Supply, and the Fan Tray. The module was validated with two (2) Supervisor cards in slots 5 and 6 and eight (8) Line cards in slots 1 through 4 and 7 through 10. These cards are a part of the cryptographic boundary. The physical ports provided by the module are mapped to four high level FIPS 140-2 defined logical interfaces: Data Input Interface, Data Output Interface, Control Input Interface, and status output. The logical interfaces and their mapping are described in the following tables:

Port Name	Quantity	Physical Port	Physical Layer Interfaces	FIPS 140-2 Logical Interfaces
Supervisor Management Ethernet port	1	RJ45	<ul style="list-style-type: none"> 10/100/1000 Ethernet (IEEE 802.1AE) 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface
Auxiliary	1	8 Position 8 Contact (8P8C)	<ul style="list-style-type: none"> RS-232 (Serial) 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface
Console	1	8 Position 8 Contact (8P8C)	<ul style="list-style-type: none"> RS-232 (Serial) 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface

Compact Flash Port	2	Compact Flash	<ul style="list-style-type: none"> Compact Flash 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Status Output Interface
Light Emitting Diodes (LED)	7	Light	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Status Output Interface
Reset Switch	1	Mechanical switch	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Control Input Interface

Table 2 – Supervisor Card Ports and Interfaces

NOTE: Each Supervisor card includes two USB ports and one Connectivity Management Processor (CMP) port. These ports are disabled by covering Tamper Evident Labels (TEs) while operating in FIPS-mode.

Port Name	Quantity	Physical Port	Physical Layer Interfaces	FIPS 140-2 Logical Interfaces
Ethernet	32	(SFP+ pluggable optic module)	<ul style="list-style-type: none"> 10/100/1000 Ethernet 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface
Light Emitting Diodes (LED)	34	Light	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Status Output Interface

Table 3 – N7K-M132XP-12 32 Port- 10Gb Ethernet Line Card Ports and Interfaces

Port Name	Quantity	Physical Port	Physical Layer Interfaces	FIPS 140-2 Logical Interfaces
Ethernet	32	(SFP+ pluggable optic module)	<ul style="list-style-type: none"> 10/100/1000 Ethernet 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface

Light Emitting Diodes (LED)	34	Light	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Status Output Interface
-----------------------------	----	-------	---	---

Table 4 – N7K-M132XP-12L 32 Port- 10Gb Ethernet Line Card Ports and Interfaces

Port Name	Quantity	Physical Port	Physical Layer Interfaces	FIPS 140-2 Logical Interfaces
Ethernet	48	RJ45	<ul style="list-style-type: none"> 10/100/1000 Ethernet 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface
Light Emitting Diodes (LED)	50	Light	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Status Output Interface

Table 5 – N7K-M148GS-11 48 Port- 10/100/1000c Ethernet Line Card Ports and Interfaces

Port Name	Quantity	Physical Port	Physical Layer Interfaces	FIPS 140-2 Logical Interfaces
Ethernet	48	SFP optics	<ul style="list-style-type: none"> 10/100/1000 Ethernet 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface
Light Emitting Diodes (LED)	50	Light	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Status Output Interface

Table 6 – N7K-M148GS-11L 48 Port- 10/100/1000c Ethernet Line Card Ports and Interfaces

Port Name	Quantity	Physical Port	Physical Layer Interfaces	FIPS 140-2 Logical Interfaces
Ethernet	8	X2	<ul style="list-style-type: none"> 10Gb Ethernet 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface
Light Emitting Diodes (LED)	10	Light	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Status Output Interface

Table 7 – N7K-M108X2-12L 8 Port- 10Gb Ethernet Line Card Ports and Interfaces

Port Name	Quantity	Physical Port	Physical Layer Interfaces	FIPS 140-2 Logical Interfaces
Ethernet	8	RJ45	<ul style="list-style-type: none"> 10/100/1000 Ethernet 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface
Ethernet	10	RJ45	<ul style="list-style-type: none"> 10Gb Ethernet 	<ul style="list-style-type: none"> Data Input Interface Data Output Interface Control Input Interface Status Output Interface
Light Emitting Diodes (LED)	10	Light	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Status Output Interface

Table 8 – N7K-F132XP-15 32-Port 1 and 10 Gigabit Ethernet Line Card Ports and Interfaces

Port Name	Quantity	Physical Port	Physical Layer Interfaces	FIPS 140-2 Logical Interfaces
Light Emitting Diodes (LED)	2	Light	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Status Output Interface

Table 9 – Fan Tray Ports and Interfaces

Port Name	Quantity	Physical Port	Physical Layer Interfaces	FIPS 140-2 Logical Interfaces
On/Off Switch	1	Physical switch	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Control Input Interface
Power port	2	110 or 220 AC Input	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Power Input
Light Emitting Diodes (LED)	5	Light	<ul style="list-style-type: none"> N/A 	<ul style="list-style-type: none"> Status Output Interface

Table 10 –Power Ports and Interfaces

Roles, Services and Authentication

As required by FIPS 140-2, the module supports role-based authentication. There are six roles (Table 11) in the module that operators may assume: Network Administrator, which is the Crypto-Officer, also Network Operator, Virtual Device Administrator, Virtual Device User, and CTS Supplicant, which are defined as the User role. In addition, the module also supports Unauthenticated User role. Table 11 provides a list and description of all six predefined roles provided by the module.

FIPS Role	Role Name	Role Description
Crypto-Officer	Network Administrator (NA)	Complete read-and-write access to the entire NX-OS device (only available in the default VDC)
User	Network Operator (NO)	Complete read access to the entire NX-OS device(only available in the default VDC)
	Virtual Device Administrator (VDCA)	Read-and-write access to a Virtual Device Context (VDC)
	Virtual Device User (VDCU)	Read access to a Virtual Device Context (VDC)
	CTS Supplicant	Cisco TrustSec Network entity
Unauthenticated User	Unauthenticated User	View the status output from the module's LED and cycle power.

Table 11 Roles and Services

Services provided by the Nexus 7000 10 Slot are provided via the ports and interfaces described in Table 12. All other ports and interfaces do not provide FIPS 140-2 defined services.

Port Name	Interfaces
Supervisor Management Ethernet port	<ul style="list-style-type: none"> • Command Line Interpreter (CLI) <ul style="list-style-type: none"> ○ SSH • NETCONF (XML over SSH)
Auxiliary	<ul style="list-style-type: none"> • Command Line Interpreter (CLI) <ul style="list-style-type: none"> ○ SS • NETCONF (XML) over SSH <ul style="list-style-type: none"> ○ SSH
Console	<ul style="list-style-type: none"> • Command Line Interpreter (CLI)
Reset switch	<ul style="list-style-type: none"> • N/A – provides reset via physical signal alteration
On/Off Switch	<ul style="list-style-type: none"> • N/A – provides reset via physical signal alteration
LEDs	<ul style="list-style-type: none"> • NA – provides a status output service
Compact Flash Port	<ul style="list-style-type: none"> • Command Line Interpreter (CLI)

Table 12 – Ports to Operator access interface mapping

Authentication Mechanisms

The module supports password and public key based authentication methods. To log on to the modules for management purposes, an operator must connect to it through one of the management interfaces (Console port, MGMT port, or SSH,) and provide a password. Additionally, the module also supports public key based authentication method, which is detailed in Table 13 below.

Authentication Type	Strength
Username Password mechanism (RADIUS, TACACS+)	Passwords must be a minimum of 8 characters, with a maximum of 64 characters (see Secure Operation section of this document). The probability of a false positive for a random password guess is less than 1 in 1,000,000.
Certificate based authentication	The module supports a public key based authentication with 1024 to 4096 bit keys, and thus the probability of a false positive from a random correct guess s greater than 1 in 1,000,000.

Table 13 – Estimated Strength of Authentication Mechanisms

Table 14 provides a complete list and description of all services provided by the Nexus 7000 10 Slot. In addition, this table also provides a mapping of the services to each role. The columns on the left show the six predefined roles supported by the module. An “X” in the role column signifies that the identified role is allowed to access the corresponding service.

NA	VDCA	VDCU	Unauthen- -ticated User	CTS Supplicant	NO	Service Name	Service Description
X	X					Authentication, Authorization, and Accounting (AAA) Configuration	Allows the configuration of AAA relevant functionality. The following is a bulleted description of the functionality provided by the AAA service: <ul style="list-style-type: none"> • RADIUS server group configuration • 802.1x server group configuration • AAA authentication configuration (TACACS+, RADIUS, Username and Password) • MSCHAPv2 • Radius
X	X					Authentication	Configures authentication for various protocols which support it (i.e. OSPF, RIP, etc.) Also, allows specification of the authentication mode, MD5 or clear text.
X	X					Absolute	Specifies a time range which can be applied to rule enforcement.
X	X					Accept-Lifetime	Specifies an interval within which the device accepts a key during key exchange with another device.
X	X					Address	Configures the address type of a particular protocol (IPv4, IPv6, unicast, multicast).
X	X					Arp access-list	Creates an Address Resolution Protocol (ARP) access control list (ACL) or allows entry to ARP access list configuration mode.
X	X					Bandwidth	Sets bandwidth values for an interface.
X	X					Border Gateway Protocol (BGP)	Configures and manages Border Gateway Protocol policies.
X	X					Class	Specifies a control plane class map for a control plane policy map.

NA	VDCA	VDCU	Unauthen- ticated User	CTS Supplicant	NO	Service Name	Service Description
X	X					Class-Map type control-plane	Creates or specifies a control plane class map or allows entry to the class map configuration mode.
X	X					Clear	Clears various data from the device, for example logs, 802.1x authenticator instances, policies, etc.
X	X					Cisco TrustSec (CTS)	Configuration of Cisco TrustSec parameters.
				X		Cisco TrustSec authentication	Authenticates to the module that has been authenticated in Cisco TrustSec Network.
X	X					Deadtime	Allows the specification of RADIUS or TACAS+ deadtime
X	X					Deny	Allows the denial of traffic based on configured parameters.
X	X					Description	Allows the operator to provide a description that describes a particular objects within the system (e.g. User role, identity policy, etc.).
X	X	X				Device	Allows the addition of a supplicant device to the Extensible Authentication Protocol over User Datagram Protocol (EAPoUDP)
X	X					Dot1x	Configuration of 802.1x parameters.
X	X	X				Embedded Event Manager (EEM)	Allows the configuration and viewing of various log related objects and logging parameters. Embedded Event Manager is a powerful tool integrated with Cisco NX-OS Software for monitoring and management from within the device itself.
X	X					EIGRP	Configures and manages Enhanced Interior Gateway Routing Protocol (EIGRP)
X	X					EOU	Configuration of Extensible Authentication Protocol over User Datagram Protocol.
X	X					EQ	Specifies equal port as a group member in an IP port object group. An equal group member matches port numbers that are equal to the port number specified in the member.
X	X					Feature	Allows the enablement of particular features (e.g. CTS, dot1x, dhcp, etc.)
X	X					Flexible NetFlow	Allows the configuration of Cisco Flexible NetFlow related parameters. Cisco NetFlow provides IP monitoring and reporting.
X	X					Gateway Load Balancing Protocol (GLBP)	Configuration of GLBP groups.
X	X					DHCP	Configures and managers DHCP on the module.
X	X					GT	Specifies a greater-than group member for an IP port object. A greater-than group

NA	VDCA	VDCU	Unauthen- ticated User	CTS Supplicant	NO	Service Name	Service Description
							member matches port numbers that are greater than the port number specified in the member.
X	X					Host	Specifies hosts as either an IPv4 or IPv6 member.
X	X					Hot Standby Router Protocol (HSRP)	Allows the configuration of HSRP policies and groups.
X	X	X				Identity	Configures the identity policy profiles for end point devices for which LPIP validation is no enforced.
X	X	X				Interface	Provides interface configuration and management services.
X	X					IP	Configuration of IP related parameters.
X	X					IS-IS	Configures Intermediate System-to-Intermediate System (IS-IS) interface policies
X	X					Key	Creates or removes a Key or allows entry to the configuration mode of an existing key.
X	X					Key-string	Allows the entry of a key using manual entry. Allows both encrypted and plaintext entry of the manually entered key material.
X	X					Key chain	Creates a group of keys with a single description.
X	X	X	X		X	L.E.D.	Observe the operation of the L.E.D.'s
X	X					Link Aggregation Control Protocol (LACP)	To configure and manage the LACP port channeling service.
X	X	X				License	Provide License Management services(i.e., clear, install, show, update)
X	X					LT	Specifies a less-than group member for an IP port object. A less-than group member matches port numbers that are less than the port number specified in the member.
X	X	X				Logging	Allows the configuration and viewing of various log related objects and logging parameters (i.e. enable logging during certain conditions, log file management, Syslog source interface)
X	X					MAC	Configuration of MAC related parameters
X	X					Match	Redistributes routes from one routing protocol to another and also enables policy routing.
X	X					Maximum-Paths	Configures the maximum number of routes based on a particular metric within a particular protocol (i.e. the maximum number of equal cost parallel routes RIP will install into the routing table).
X	X					NAC enable	Enables NAC on an interface.
X	X					NEQ	T specify an not-equal group member for an IP port object group. A not-equal group member matches port numbers that are

NA	VDCA	VDCU	Unauthen- ticated User	CTS Supplicant	NO	Service Name	Service Description
							not equal to the port number specified in the member.
X	X	X				Object-group	Configuration of Object-group related parameters. An object-group is a MAC access control list applied to an identity policy.
X	X					Open Shortest Path First (OSPF)	Enables, configures, and manages the OSPF protocol.
X	X					Periodic	Specifies a periodic (one or more times per week) time range which can be applied for rule enforcement.
X	X					Permit	Allows traffic based on configured parameters.
X	X					Platform	Configure how supervisor modules update I/O modules with changes to access-control lists. Configures rate limits in packets per second on egress traffic.
X	X					Police	Configure policing for a class map in a control plane policy map.
X	X					Policy	Manually configure a Cisco TrustSec authentication policy on an interface. This can also be used to specify a control plane policy map.
X	X					Port-channel load-balance ethernet	Configure and manage load-balancing among the interfaces in the channel-group bundle.
X	X	X	X		X	Power Cycle	Physically Cycle the power of the module
X	X					Private-VLAN	Configuration and management of VLAN services.
X	X					RADIUS	Configuration of RADIUS server parameters.
X	X					Range	Specifies a range of ports as a group member in an IIP port object-group.
X	X					Remark	Allows the entry of a comment into a IPv4 or MAC access control list.
X	X					Replay-Protection	Enable data-path replay protection feature for the Cisco TrustSec authentication on an interface.
X	X					Resequence	Reassign sequence numbers to all rules in an access control list or a time range.
X	X					Role	Allows configuration of role related parameters.
X	X					Routing Information Protocol (RIP)	Allows the configuration and management of Routing Protocol polices.
X	X					Route-Map	Configure and manage route-map policies.
X	X					SAP PMK	Manually configures the Cisco TrustSec Security Association Protocol (SAP) pairwise master key (PMK).
X	X					SAP modelist	Configures Cisco TrustSec SAP encryption and authentication modes. Allows encryption and authentication,

NA	VDCA	VDCU	Unauthen- ticated User	CTS Supplicant	NO	Service Name	Service Description
							Authentication only, or no encryption or authentication. Also, specifies whether the Security group tag (SGT) encapsulation is used.
X	X					Send Lifetime	Specifies the time interval within which the device send the key during the key exchange with another device.
X	X					Server	Adds or deletes a RADIUS or TACACS+ server group.
X	X					Service DHCP	Enables the DHCP relay agent
X	X					Service-policy input	Attached a control plan policy map to the control plane
X	X					Set COS	Sets the IEEE 802.Q Class Of Service (COS) value for a control plane policy map.
X	X					Spanning Tree	Configures and manage Spanning Tree Services (i.e. cost, link-type, mode, MST)
X	X					SSH	Creates a Secure Shell (SSH) session.
X	X					SSH Key	Creates an SSH server key for a virtual device context (VDC). Can specify the length of the SSH server key from 768 to 2048. Please note for FIPS mode the key length must be greater than 1024 bits (default).
X	X					SSH server enable	Enables SSH server for a VDC.
X	X					Storm Control	Sets the suppression level for traffic storm control.
X	X					Switchport	Configures a port as either a Layer 2 switched or Layer 3 routed interface. Interfaces are layer 3 by default.
X	X					Switchport port security	Enables port security on a Layer 2 interface and configuration (e.g. aging time, aging type, mac address, etc.).
X	X	X				Show	Shows the current configuration of specified service parameters, policies, and logs.
X	X					TACACS +	Configuration of TACACS+ server parameters.
X	X	X			X	Telnet	Configuration of Telnet server parameters.
X	X					Time range	Specifies a time range which can be applied for rule enforcement.
X	X					Tunnel	Provides tunnel configuration and management.
X	X					Username	Creates and configures a user account in a VDC.
X						VLAN	Configuration and management of VLAN objects and parameters.
X	X					VFR	Configuration of Virtual Routing and Forwarding (VRF) parameters.
	X					VRRP	Configuration and management of the Virtual Router Redundancy Protocol

NA	VDCA	VDCU	Unauthen- ticated User	CTS Supplicant	NO	Service Name	Service Description
							(VRRP).

Table 14 – Access Control Policy

Critical Security Parameters Used by the Module

The module securely administers both cryptographic keys and other critical security parameters. The tamper evidence seals provide physical protection for all keys. All keys are also protected by the password-protection on the Crypto Officer role login, and can be zeroized by the Crypto Officer. All zeroization consists of overwriting the memory that stored the key. The module does not output keys or key components in plaintext form. Table 15 below is a complete list of CSPs used by various services and protocols.

CSP #	CSP	Algorithm/Gener- ation	Description	Storage	Zeroization
1	RNG Seed	X9.31	RNG Seed is a 128-bit seed for ANSI X9.31 Appendix A.2.4 Using AES Algorithms implemented on Openssl-fips-1.2	DRAM (plaintext)	Resetting or rebooting the module
2	RNG Seed Key	X9.31	RNG Seed Key is a 128-bit seed key for ANSI X9.31 Appendix A.2.4 Using AES Algorithms implemented on Openssl-fips-1.2.	DRAM (plaintext)	Resetting or rebooting the module
3	Diffie-Hellman private exponent	DH	Used in Diffie-Hellman (DH) exchange	DRAM (plaintext)	Resetting or rebooting the module
4	Diffie-Hellman private exponent	DH	used in Diffie-Hellman (DH) exchange.	DRAM (plaintext)	Resetting or rebooting the module
5	RADIUS AES KEK wrap Key	AES	256 bit AES Key used for protecting the confidentiality of the traffics in/out from RADIUS	DRAM (plaintext)	Resetting or rebooting the module
6	RADIUS AES KEK wrap MACK	HMAC-SHA1	Used for protecting integrity of traffics in/out from RADIUS	DRAM (plaintext)	Resetting or rebooting the module
7	EAP-FAST PAC KEY	Shared Secret	<i>This is a 256-bit shared secret between the EAP-FAST client and authentication server. Used to</i>	Flash (plaintext)	Overwrite with new secret

			<i>secure an EAP-FAST tunnel</i>		
8	EAP-FAST ENCRYPTION KEY	AES	Used to protect the data confidentiality during EAP-FAST protocol implementation.	DRAM (plaintext)	Automatically when EAP-FAST Session is terminated
9	EAP-FAST Integrity KEY	HMAC-SHA1	used to protection the data integrity during EAP-FAST protocol implementation	DRAM (plaintext)	Automatically when EAP-FAST Session is terminated
10	EAP-FAST Master Session Key	Shared Secret	512-bit session key generated by the EAP-FAST authentication method. It is then used as PMK for CTS.	DRAM (plaintext)	Automatically when EAP-FAST Session is terminated
11	SAP Pairwise Master key (PMK)	AES	used to derive other cryptographic keys used in SAP protocol implementation.	DRAM (plaintext)	Automatically when SAP Session is terminated
12	SAP Pairwise Transient Key (PTK)	Shared Secret	Concatenation of KCK, KEK and TK. See individual sections for details on each.	DRAM (plaintext)	Concatenation of KCK, KEK and TK. See individual sections for details on each.
13	SAP Key Encryption Key (KEK)	AES	used to encrypt SAP payloads during SAP protocol implementations.	DRAM (plaintext)	Automatically when SAP Session is terminated
14	SAP Key Confirmation Key (KCK)	HMAC-SHA1	used to protect SAP payloads integrity during SAP protocol implementations.	DRAM (plaintext)	Automatically when SAP Session is terminated
15	SAP Temporal Key (TK)	AES	128 bit AES key used to encrypt the data between SAP peers	DRAM (plaintext)	Automatically when SAP Session is terminated
16	SSH RSA private Key	RSA	1024-2048-bit private key used in SSH protocol	NVRAM (encrypted)	crypto key zeroize rsa
17	SSH session key	TDES / AES	This is the SSH session key. It is used to encrypt all SSH data traffics traversing between the SSH client and SSH server.	DRAM (plaintext)	Zeroized when SSH session is terminated
18	SSH session authentication key	HMAC-SHA-1	This key is used to perform the authentication between the SSH	DRAM (plaintext)	Zeroized when SSH session is terminated

			client and SSH server.		
19	User Password	Shared Secret	Minimum of 8 characters, used for User role authentication.	NVRAM (encrypted)	Overwrite with new password
20	RADIUS Secret	Shared Secret	Minimum of 8 characters. Used as shared secret in RADIUS	NVRAM (encrypted)	"# no radius-server key"
21	TACACS+ Secret	Shared Secret	Minimum of 8 characters. Used as shared secret in TACACS+	NVRAM (encrypted)	"# no tacacs-server key"

Table 15 – CSP's Used by the Module

The services accessing the Critical Service Parameters (CSPs), the type of access and which role accesses the CSPs are listed in the Table 16

CSP/Role/Service Access Policy	Critical Security Parameter																								
		CSP 1	CSP 2	CSP 3	CSP 4	CSP 5	CSP 6	CSP 5	CSP 6	CSP 7	CSP 8	CSP 9	CSP 10	CSP 11	CSP 12	CSP 13	CSP 14	CSP 15	CSP 16	CSP 17	CSP 18	CSP 19	CSP 20	CSP 21	
Role/Service																									
User role																									
Status Functions																									
Network Functions									r																
									w																
									d																
Directory Services																									
Crypto Officer Role																									
Configure the Module		r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r
		w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w
		d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d
Define Rules and Filters		r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r
		w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w
		d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d
Manage the Module		r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r
		w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w
		d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d

Set Encryption/Bypass		r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r	r
		w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w	w
		d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d	d
Install Service Module																											

r = read w = write d = delete

Table 16 – Role and Service Access to Security Relevant Data Items

Approved Cryptographic Algorithms

The appliance supports many different cryptographic algorithms; however, only FIPS approved algorithms may be used. The following cryptographic algorithms are to be used:

- AES encryption/decryption
- Triple-DES encryption/decryption
- SHA-1/224/256/384/512 hashing
- HMAC-SHA1/HMAC-SHA224/HMAC-SHA256/HMAC-SHA384/HMAC-SHA512 for hashed message authentication
- RSA signing and verifying
- DSA signing and verifying
- X9.31 for RNG

The modules cryptographic implementations have achieved the following certifications:

Algorithm	Openssl-fips-1.2	ASIC	Renesas AE45C
AES	1602	1024 1275 1197 1276 1426 1427	N/A
Triple-DES	1047	N/A	N/A
DSA	495	N/A	N/A
SHS	1415	N/A	1307
HMAC	938	N/A	847
RNG	859	N/A	N/A
RSA	784	N/A	N/A

Table 17 – Algorithm Certificates

Note: Pursuant to the DES Transition Plan and the approval of the *Withdrawal of Federal Information Processing Standard (FIPS) 46-3, Data Encryption Standard (DES); FIPS 74, Guidelines for Implementing and Using the NBS Data Encryption Standard; and FIPS 81, DES Modes of Operation*, the DES algorithm should not be used in FIPS approved mode of operation. The DES algorithm must not be used when the Triple-DES/AES licenses are installed.

Non-FIPS Approved Algorithms allowed for use in FIPS-mode

- Diffie-Hellman (allowed for use in FIPS mode) key agreement; key establishment methodology provides between 80 and 156 bits of encryption strength; non-compliant less than 80-bits of equivalent strength).

Non-FIPS Approved Algorithms

The modules implement the following non-FIPS-approved cryptographic algorithms:

- DES
- RC4
- MD5
- MD5 HMAC
- Non-Approved RNG

Note: Non-FIPS approved algorithms cannot be used in FIPS mode of operation.

Self-Tests

The modules include an array of self-tests that are run during startup and periodically during operations to prevent any secure data from being released and to insure all components are functioning correctly. The modules implement the following power-on self-tests:

Implementation	Tests Performed
Openssl-fips-1.2	<ul style="list-style-type: none">• Software Integrity Test• DSA KAT (signature/verification)• RSA KAT (signature/verification)• Triple-DES KAT• HMAC SHA-1 KAT• HMAC SHA-224 KAT• HMAC-SHA-256 KAT• HMAC-SHA-384 KAT• HMAC-SHA-512 KAT• RNG KAT
ASIC	<ul style="list-style-type: none">• AES-GCM KAT
Renesas AE45C	<ul style="list-style-type: none">• HMAC SHA-1 KAT

Table 18 - Module Power On Self -Tests

The modules perform all power-on self-tests automatically at boot. All power-on self-tests must be passed before a User/Crypto Officer can perform services. The power-on self-tests are performed after the cryptographic systems are initialized but prior to the initialization of the network ports; this prevents the module from passing any data during a power-on self-test failure. In the unlikely event that a power-on self-test fails, an error message is displayed on the console followed by a module reboot. The module supports cryptographic bypass functionality.

In addition, the modules also perform the following conditional self-tests:

Implementation	Tests Performed
Openssl-fips-1.2	<ul style="list-style-type: none">• Pairwise consistency test for RSA• Pairwise consistency test for DSA• Continuous Random Number Generator Test for the all RNGs• Bypass Test

Table 19 - Module Conditional Self Tests

Mitigation of Other Attacks

The module does not claim to mitigate any attacks in a FIPS-approved mode of operation.

SECURE OPERATION

The Nexus 7000 10 Slot meets FIPS 140-2 Level 2 requirements. This section describes how to place and keep the module in a FIPS-approved mode of operation. Operating the module without maintaining the following settings will remove the modules from the FIPS-approved mode of operation.

Crypto Officer Guidance – System Initialization

The modules were validated with NX-OS version 5.1.1a. This is the only allowable software image for FIPS-approved mode of operation. Please note that software update is not allowed in FIPS mode.

The Crypto Officer must configure and enforce the following initialization procedures:

1. Disable diagnostic output to the console/VTY

```
switch# no debug all
```
2. Define a User role password and a Crypto Officer role password.
3. Ensure passwords are at least 8 characters long.
4. Apply tamper evident labels as described in the "Tamper Evidence" section below.
5. Reboot the module.

Crypto Officer Guidance – System Configuration

To operate in FIPS mode, the Crypto Officer must:

- Configure terminal
- fips mode enable
- exit
- show fips status

- copy running-config startup-config
- reload

Tamper Evidence

All CSPs are stored and protected within each appliance's tamper evident enclosure.

The tamper evident labels shall be installed for the module to operate in a FIPS Approved mode of operation. The Crypto Officer is responsible for properly placing all 30 tamper evident labels. The security labels recommended for FIPS 140-2 compliance are provided in the FIPS Kit (Cisco-FIPS-KIT=). These security labels are very fragile and cannot be removed without clear signs of damage to the labels. Any Service Module (SM) slot not populated with a SM must be populated with an appropriate slot cover in order to operate in a FIPS compliant mode. The slot covers are included with each module, and additional covers may be ordered from Cisco. The same procedure mentioned below to apply tamper evidence labels for SMs must also be followed to apply tamper evidence labels for the slot covers.

The Crypto Officer should inspect the tamper evident labels periodically to verify they are intact and the serial numbers on the applied tamper evident labels match the records in the security log.

Application of the serialized tamper evident labels is as follows:

Nexus 7000 – 10 Slot Chassis

1. Turn off and unplug the system before cleaning the chassis and applying labels.
2. Clean the chassis of any grease, dirt, or oil before applying the tamper evident labels. Alcohol-based cleaning pads are recommended for this purpose.
3. Two tamper evidence labels should be placed so that one half of each tamper evidence label covers the front of the fan-bank module and the other half covers the module case. Any attempt to remove the fan-bank will leave tamper evidence.
4. For each supervisor module, service module, or service module cover installed in the module, place a tamper evidence label so that one half of the label covers the right side of the supervisor module, service module, or service module cover and the other half covers the right side of the module. Any attempt to remove a service module will leave tamper evidence.
5. For each power supply or power supply cover installed in the module, place a tamper evidence label so that one half of the label covers the enclosure and the other half covers the front of the power supply or power supply cover. Any attempt to install or remove a power supply will leave tamper evidence.
6. For each supervisor module installed, place a tamper evidence label to cover Connectivity Management Processor port (CMP) port.
7. For each supervisor module installed, place a tamper evidence label to cover two USB ports.
8. Record the serial numbers of the labels applied to the system in a security log.

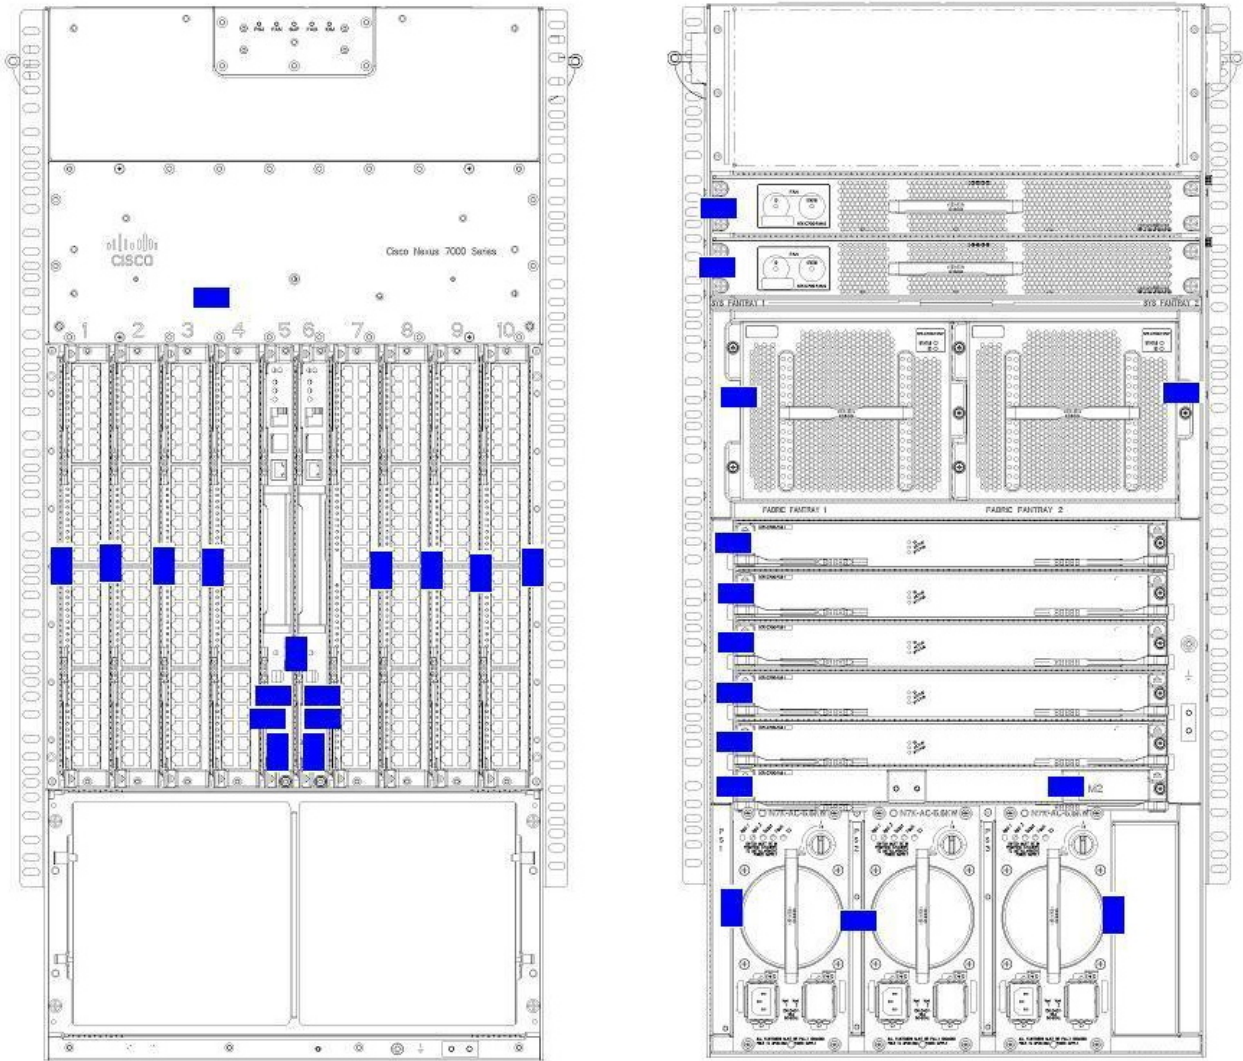


Figure 2- Nexus 7000 – 10 Slot Chassis Front Tamper Evident Label Placement

Identifying Operation in an Approved Mode

The following activities are required to verify that that the module is operating in an Approved mode of operation.

1. Verify that the tamper evidence labels have been properly placed on the module based on the instructions specified in the "Tamer Evidence" section of this document.
2. Verify that the length of User and Crypto Officer passwords and all shared secrets are at least eight (8) characters long, as specified in the "Crypto Officer Guidance – System Initialization" section of this document.
3. Issue the command: 'show fips status' and verify that "FIPS status is enabled" is shown on Command Line Interface.

DEFINITION LIST

AES	Advanced Encryption Standard
AT	Abbreviation for Authenticators (see Authenticators)
Authenticators	Devices that are already part of a Cisco TrustSec network
COS	Class Of Service
CMVP	Cryptographic Module Validation Program
CSP	Critical Security Parameter
CTS	Cisco TrustSec protocol
DES	Data Encryption Standard
EAP	Extensible Authentication Protocol
FIPS	Federal Information Processing Standard
HTTP	Hyper Text Transfer Protocol
KAT	Known Answer Test
LAN	Local Area Network
LED	Light Emitting Diode
LPIP	LAN Port IP Traffic
MST	Multiple Spanning Tree
NA	Network Administrator
NAC	Network Admission Control
NIST	National Institute of Standards and Technology
NO	Network Operator
NVLAP	National Voluntary Laboratory Accreditation Program
PMK	Pairwise Master Key
PPP	Point-to-Point Protocol
RAM	Random Access Memory
RSA	Rivest Shamir and Adleman method for asymmetric encryption
SAN	Storage Area Network
SGT	Security group tag
SAP	Security Association Protocol
SHA	Secure Hash Algorithm
SSH	Secure Shell
SSL	Secure Sockets Layer
SM	Service Module
Supplicants	Devices that attempt to join a Cisco TrustSec network.
TLS	Transport Layer Security
VDC	Virtual Device Control
VDCA	Virtual Device Administrator
VDCU	Virtual Device User
VLAN	Virtual LAN
VRF	Virtual Routing and Forwarding